






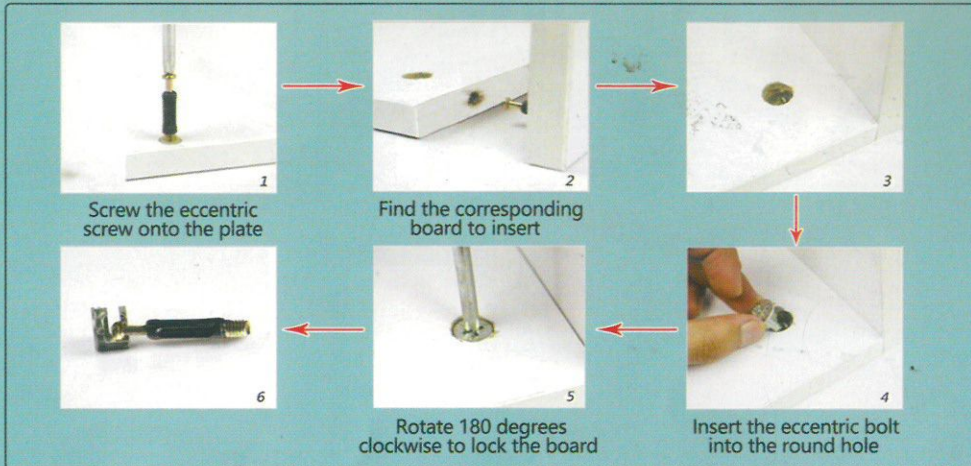


1903-1

Installation diagram of bucket cabinet

						
Eccentric screw	Eccentric bolt	3.5CM self tapping screw	Metal pin	Hinge	Minimum self tapping screw	Little nail
A*29	B*29	C*75	D*10	E*2	F*12	G*30

Eccentric installation principle



1 Screw the eccentric screw onto the plate

2 Find the corresponding board to insert


3

4 Insert the eccentric bolt into the round hole

5 Rotate 180 degrees clockwise to lock the board

6

Installation of drawer section

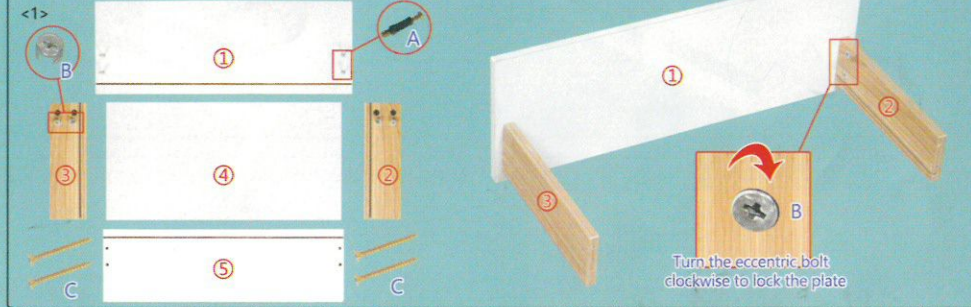


<1>

1 2 3 4 5

A B C

Turn the eccentric bolt clockwise to lock the plate

<3> Align the card slot and insert it

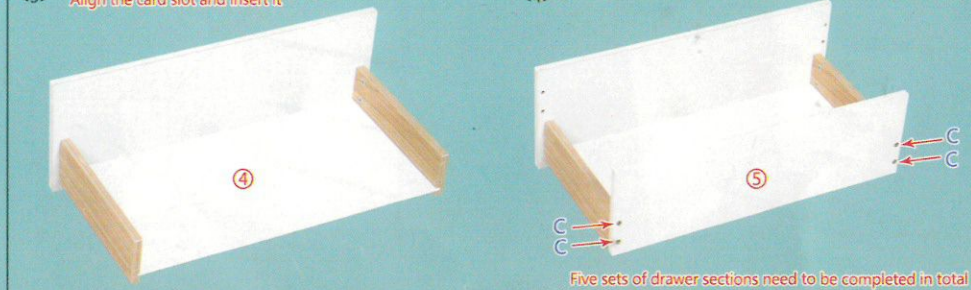

<3> Align the card slot and insert it

4


<4>

5


C C C C C

Five sets of drawer sections need to be completed in total

Plate part

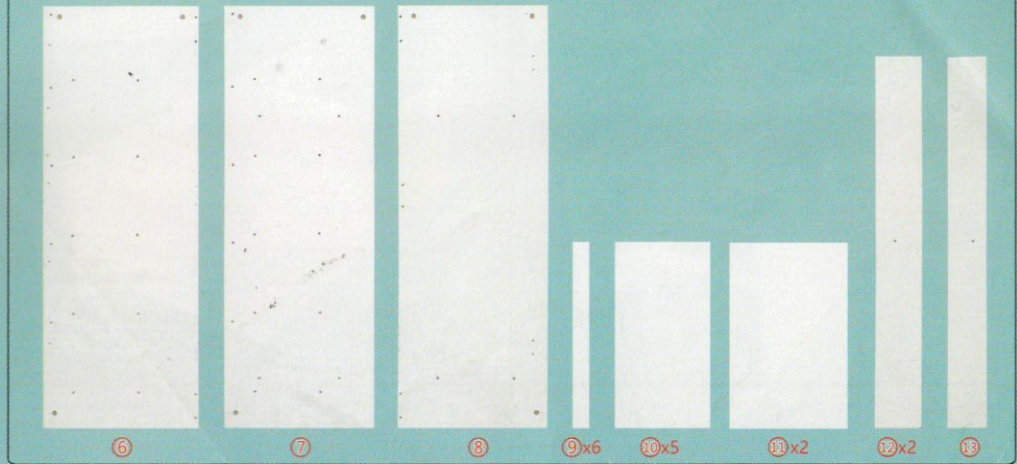

6 7 8 9x6 10x5 10x2 12x2 13

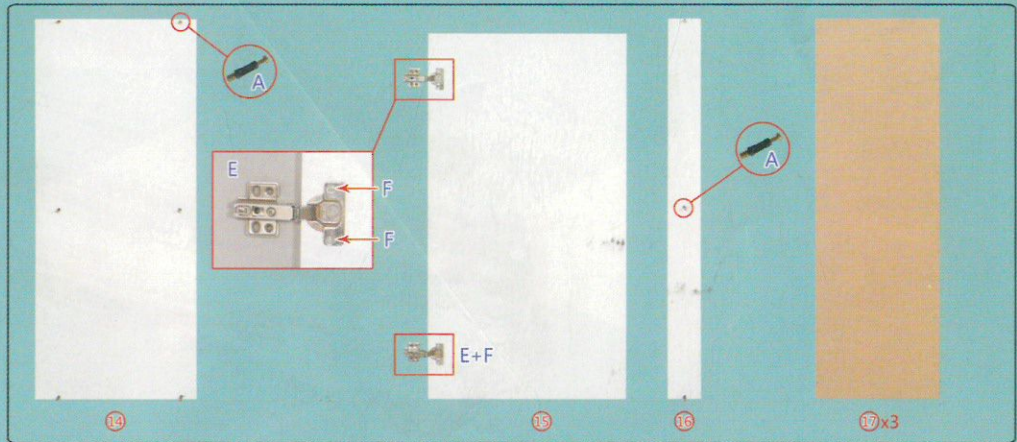

14


15 E F

16

17x3

Turn the eccentric bolt clockwise to lock the plate

Step 1: Installation of overall parts

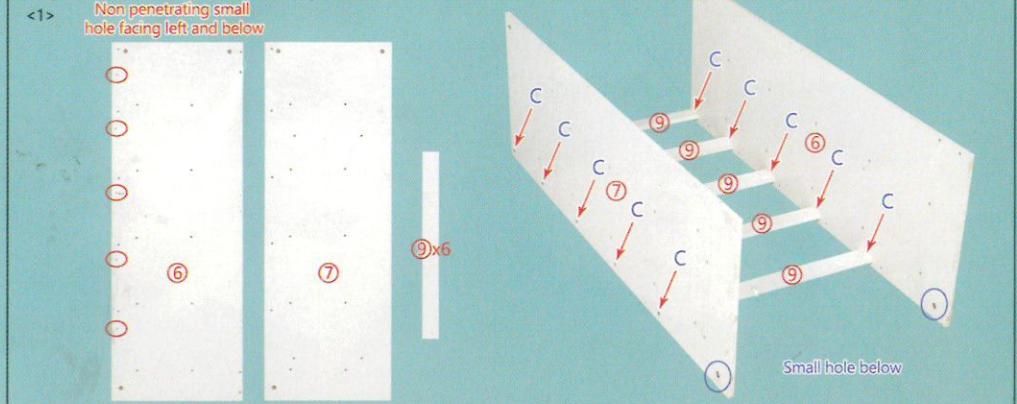

<1> Non penetrating small hole facing left and below

6 7 9x6

Small hole below