




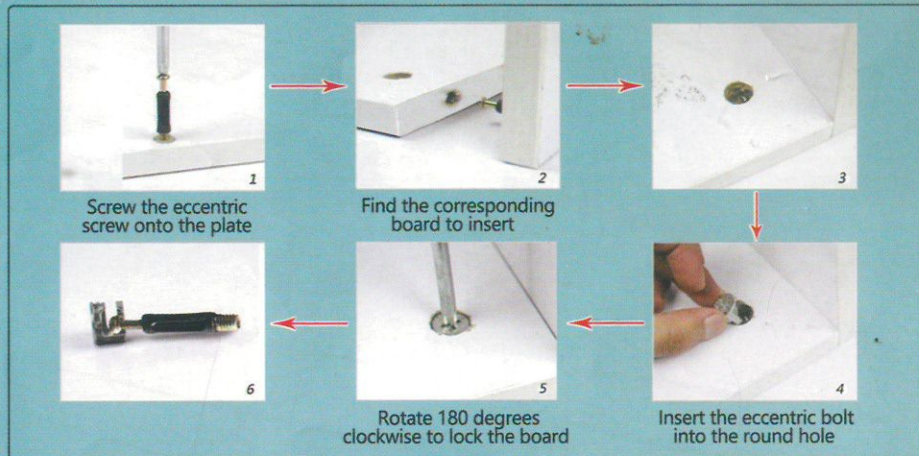


# Installation diagram of bucket cabinet with six extractions

				
Eccentric screw	Eccentric bolt	3.5CM self tapping screw	Metal pin	Double headed screw
A*36	B*46	C*62	D*12	E*5

## Eccentric installation principle



1 Screw the eccentric screw onto the plate

2 Find the corresponding board to insert

3


4 Insert the eccentric bolt into the round hole

5 Rotate 180 degrees clockwise to lock the board

6

## Installation of drawer section

<1>

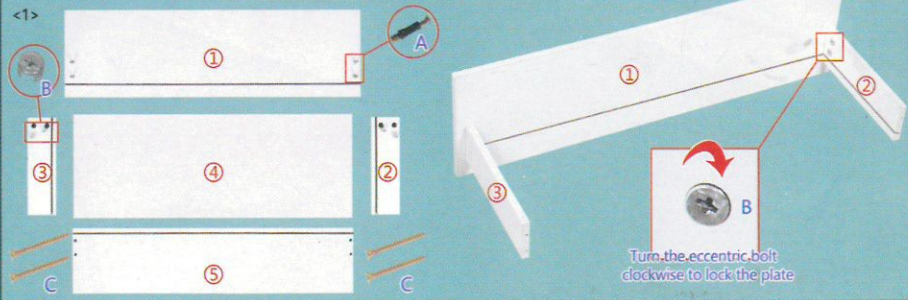


① ② ③ ④ ⑤

Turn the eccentric bolt clockwise to lock the plate

<2>

<3> Align the card slot and insert it

<4>

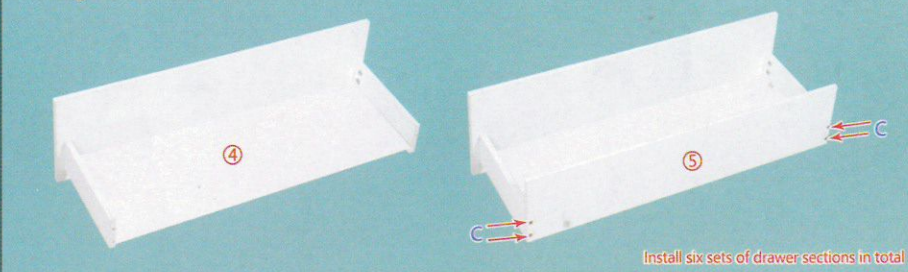


④ ⑤

Install six sets of drawer sections in total

1403-2

### Plate part

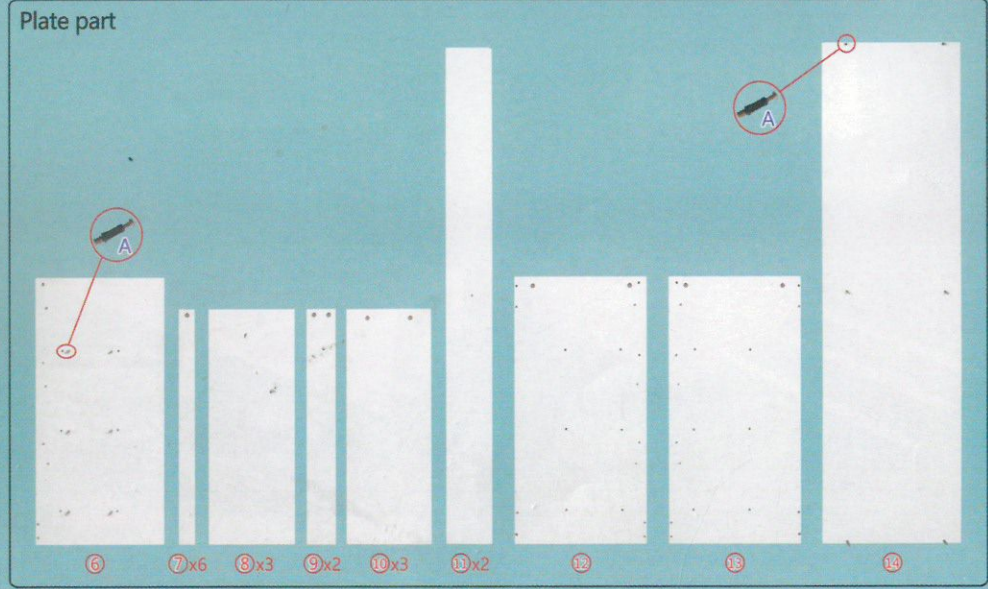


⑥ ⑦x6 ⑧x3 ⑨x2 ⑩x3 ⑪x2 ⑫ ⑬ ⑭

## Step 1: Installation of overall parts

<1>

Eccentric screw facing left

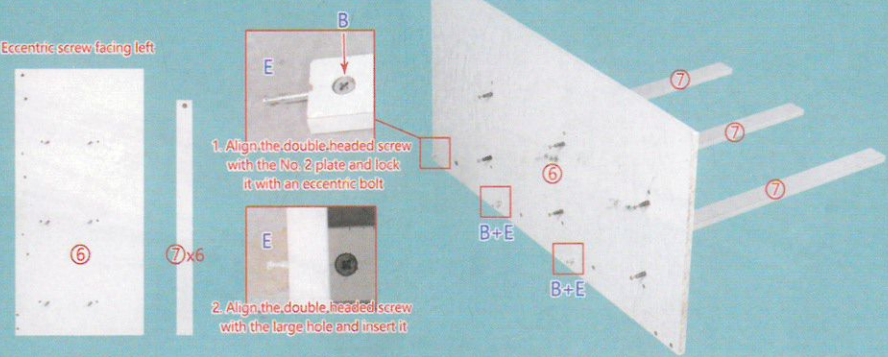

1 Align the double-headed screw with the No. 2 plate and lock it with an eccentric bolt

2 Align the double-headed screw with the large hole and insert it

B


E

⑥ ⑦ ⑦ ⑦

B+E

B+E

<2>

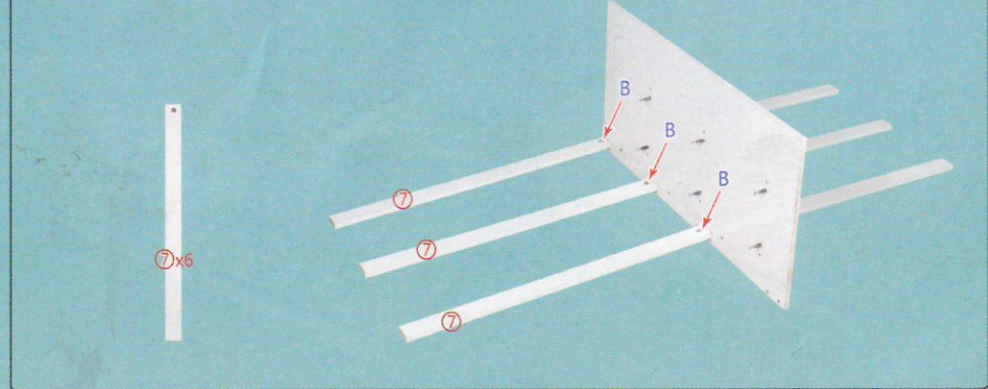

⑦x6

⑦ ⑦ ⑦

B B B